


ELONEX  
\*\*\*\*\*

ebook 



User Manual

# Introduction

## Preface

Please read this user manual carefully to help you get the most out of your eBook. Also please observe the safety warnings so you do not damage your device or more importantly yourself. A full support site is available at [www.elonex.com/support](http://www.elonex.com/support)

## Package Contents

Before using your 500EB eBook Reader, please check your package contents to ensure there aren't any items missing. If any of the listed items are missing, please contact your point of purchase for assistance.

The package includes:

1. eBook Reader\*1
2. USB cable (for data and power)\*1
3. 3.5mm Earphones \* 1
4. Quick start guide\*1

**If you have any problems or questions please DO NOT take your eBook back to the store – contact us for some helpful advice.**

**Tel – 0871 222 3456**

**eMail – [support@elonex.com](mailto:support@elonex.com)**

**Web – [www.elonex.com/support](http://www.elonex.com/support)**



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE UNIT'S CABINET THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.

#### **WARNING:**

---

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET, DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

#### **CAUTION:**

---

TO PREVENT ELECTRIC SHOCK, MATCH WIDE-BLADE PLUG WITH WIDE SLOT AND FULLY INSERT. THE APPARATUS SHALL NOT BE EXPOSED TO WATER AND NO OBJECTS FILLED WITH LIQUID SUCH AS VASES SHALL BE PLACED ON THE APPARATUS.

#### **CAUTION:**

---

TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE. IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER.

#### **WARNING:**

---

FCC REGULATIONS STATE THAT ANY CHANGE OR MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

#### **WARNING:**

---

The mains plug/appliance coupler issued as the disconnect device, the disconnect device shall remain readily operable.

Always remember to remove the plug from the mains socket before disconnecting the power leads from the unit.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

No naked flame sources such as lighted candles should be placed on the apparatus.

The use of apparatus in moderate climates.

#### **WARNING:**

 
---

Attention should be drawn to the environmental aspects of battery disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## Getting Started

### Parts and Controls

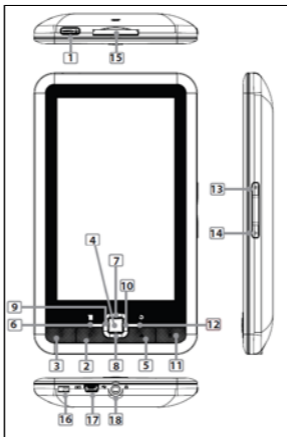

- 1 Power button** – press and hold for 3 second to turn on/off
- 2 Next pg button** – press to turn to next page
- 3 Previous pg button** – press to turn to previous page
- 4 OK / Enter Button**
- 5 Zoom button** – press to adjust font size or to zoom in/out
- 6 Menu button** – press to call out Option Menu
- 7 8 9 10 Directional buttons** – to move cursor in  
Up/Down/Left/Right direction respectively
- 11 Music button** – to enter into music playing menu
- 12 Return button** – press once to return to previous menu, press  
and hold to return to Home menu
- 13 Vol + button** – to increase volume
- 14 Vol – button** – to decrease volume
- 15 SD card slot** – supports SD/SDHC/MMC card (Optional)
- 16 DC jack** – connect to AC adapter for charging
- 17 Mini USB jack** – for data transfer and emergency charging
- 18 Earphone jack**

## Getting Started

### Powering your eBook ON/OFF

- Press and hold the [Power] button for 2 seconds to turn on.
- It may take a few moments for eBook to turn on and load.
- If eBook does not turn on, ensure the eBook is fully charged.
- To turn off eBook, press and hold [Power] button for 2 seconds.

### Charging the eBook

- You need to charge the EBook prior to using it for the first time or when battery power is low. Elonex recommend charging it for 8 hours the first time you use it to ensure the best battery life.
- You can charge the EBook via:
  - Connect to PC or other USB adapter via supplied USB cable.
  - Connect to AC source via AC adapter(not included)
- When charging through PC, you cannot operate the EBook. To operate the eBook during charging, click the 'Safely Remove Hardware' from the bottom right corner of your desktop with the eBook remaining connected to your PC.
- Turn the EBook to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the eBook in standby mode (LCD off)
- The battery status is displayed at the bottom left corner. The remaining battery playback time is displayed next to the battery icon.



PLEASE NOTE: Battery life is dependent on the usage of the eBook – ie the battery life will be longer when reading a book rather than playing video.

### Inserting Memory Card

The Reader supports SD/SDHC/MMC card. To insert a Memory card:

To insert a Memory card:

- Check that the SD card is in the correct position with the contact pins facing upwards as illustrated below.

**NOTE:** You can damage the card and the eBook if SD card is not inserted in the correct position.




- Push the SD card into the card slot until it clicks.

To remove the Memory Card:

- To remove SD card, push the SD card once again until it clicks.
- When a SD card is inserted in or ejected from the eBook, it may take few seconds for the eBook to update the content.
- Please avoid inserting or ejecting SD card when another operation is running as this may cause the eBook to crash.
- If the system is not responding, press and hold the <Power> button for 6 seconds to reset and turn it off.

## Starting from Home Menu

When the eBook is turned on, you will enter into the Home Menu.



The screenshot shows the Home Menu interface with the following elements and callouts:

- 1. Continue reading:** A section at the top showing the current page being read, including a book cover, title, author, and page number (Page 12).
- 2. Library:** A list of books with columns for author, title, and storage location (SD, INT, or FDR). Callout 2 points to the list.
- 3. Battery Indicator:** A small icon at the bottom left showing battery level.
- 4. Time & Date:** A small box at the bottom center showing the current time and date (12 / 20).
- 5. Page Number:** A small box at the bottom right showing the current page number and total pages (1000 / 1010).
- 6. Storage Location:** Callout 6 points to the storage location buttons (INT, FDR) for the first book in the library.

**1. Continue Reading**  
-display the page of the last book you were reading. Press <OK> button to open the book at that point.

**2. Library**  
-display your eBook Library. Move the cursor to desired book and press <OK> to open it.

**3. Battery Indicator**  
-displays remaining battery life when the eBook is turned on.  
- displays remaining charging time during charging

**4. Page Number**  
-displays current page number and total available pages.

**5. Time & Date**  
-display current time and date, you can set this from the [Settings]


**6. File Directory**  
- indicates the location where the file is stored. SD – SD card, INT – internal memory

## Getting Started

### Entering Option Menu

To access extra functions available, press [Menu] button to display the Option Menu as illustrated.

Press the directional key to move cursor to desired item. Selected item will be highlighted in dark. Press <OK> to enter.

To exit from Option menu, move cursor to  and press <OK> to confirm.

Alternatively, press the <Return> button to exit.



To sort books by different categories: Title, Author, Date, Format



Jump to a specific page



Read from previously added bookmarks



Adjust brightness of the display screen



Enter into Video Player



Enter into Music Player



Enter into Photo Viewer



Enter into File Explorer



Enter into System settings and to read user guide



Open your favorite book list.

### **Importing non DRM Content (500EB & 500FB)**

- The eBook opens on your computer like a USB stick as a “USB Mass Storage Device” when you connect it via USB cable.
- To import contents (eBooks, video, audio, photo etc) into the eBook, connect the eBook to PC via the supplied USB cable.
- Go to [My Computer], double click on the eBook’s disk to open.
- From here you can drag and drop files (eBook files, MP3, Video) from your computer to the eBook to use them when the eBook is disconnected.

### **Importing DRM Content (500EB Only)**

The best way to import DRM protected eBook files is using Adobe Digital Editions (ADE) software which is not only straightforward to use, but also free to download. Instructions on preparing your PC & eBook and transferring content are discussed in the following pages.

## Preparing your PC and eBook

The process of downloading, managing and transferring eBooks is a simple 3 step process. **The first time you set-up your eBook you must complete a few procedures to prepare your computer.**

### Setup 1: Install Adobe Digital Editions

*Adobe Digital Editions is the industry standard software for downloading and managing your eBook collection. The best bit about it is that it is **free** and easy to use.*

- *To download Adobe Digital Editions go online to*

[www.adobe.com/products/digitaleditions](http://www.adobe.com/products/digitaleditions)

- *Find the installer which will look like the box shown to the right. **Click Install.***



- *You will be asked to confirm the install. **Click Install***



- **Click YES** to continue the installation



- A pop-up installer will appear. Follow the installer procedures choosing the install options and path you require.



- When the install has completed, please agree to the User Agreement and Digital Editions will automatically open.

You can alternatively open it by pressing **Start > All Programs > Adobe > Adobe Digital Editions > Adobe Digital Editions**

 


For Help on using Digital Editions press F1 on your keyboard.

## Setup 2: Getting an Adobe ID

In order to use Digital Editions you must create an Adobe ID which allows you to protect your eBook investments. This is also **free** and only takes a second.

- When Digital Editions opens for the first time **Setup Assistance** will ask you to enter your Adobe ID credentials.
- If you don't have an Adobe ID click on **'Get an Adobe ID online'** and follow the online procedure to get your Adobe ID credentials

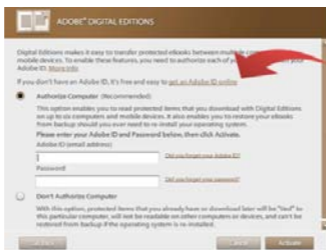

ADOBE® DIGITAL EDITIONS

Digital Editions makes it easy to transfer protected eBooks between multiple computers and mobile devices. To enable these features, you need to authorize each of your computers with your Adobe ID. [More info](#)

If you don't have an Adobe ID, it's free and easy to [get an Adobe ID online](#)

**Authorize Computer (Recommended)**

This option enables you to read protected items that you download with Digital Editions on up to six computers and mobile devices. It also enables you to restore your eBooks from backup should you ever need to re-install your operating system.

Please enter your Adobe ID and Password below, then click **Authorize**.

Adobe ID (email address)  
 [Get your first one Adobe ID](#)

Password  
 [Get your first one password](#)

**Don't Authorize Computer**


With this option, protected items that you already have or download later will be "tied" to this particular computer. Will not be readable on other computers or devices, and can't be restored from backup if the operating system is re-installed.

### Setup 3: Authorising your Hardware

Once you are logged into Adobe Digital Editions you must authorise your computer as well as your eBook hardware. This is so the hardware recognises you as the owner of the eBook Reader and the eBook content.

#### Authorising your Computer

- When Digital Editions opens for the first time you will be asked to enter your Adobe ID credentials. Enter these and press **Authorise**.
- Once activated press **Finish**

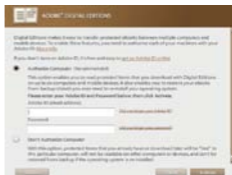


#### Authorising your eBook

- **Plug** your USB cable into your eBook and the USB port in your PC.
- Once the eBook has automatically installed itself with your operating system, Digital Editions will automatically detect the eBook as a Mobile Device. Press **Authorise Device**.



 - *When the eBook is authorised it will appear as a Bookshelf in your list of Bookshelves as the **Elonex 500EB***

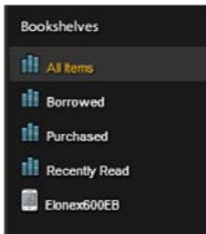

**You have now completed the necessary steps to start downloading and reading eBooks. If you have any problems with this process please call the technical support helpdesk on 0871 222 3456 (national rate).**

## Downloading and transferring eBooks

The process of downloading, managing and transferring eBooks is a simple 3 step process.



If you have completed the previous instructions you should have

- Adobe Digital Editions software installed on your PC,
- An Adobe ID and be logged into Digital Editions
- An authorised PC and eBook

 
If you can answer yes to all of these you are ready to start adding to your eBook collection.

## Step 1: Downloading an eBook

- *Once you have chosen and purchased your eBook you will be asked to Download Item. Press this button.*



- *In the pop-up that appears press **open** and your eBook will download.*
- *It will automatically load into "**Purchased eBooks**" in Digital Editions ready for you to transfer to your eBook reader.*

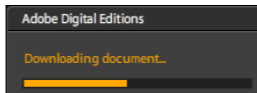


## Step 2: Transferring eBooks into Digital Editions

*NOTE: When downloading an eBook if you press **open** the eBook will automatically save into Digital Editions and My Documents and you will not have to complete this step.*

Elonex recommends that you use Digital Editions to manage your eBooks. Digital Editions is the only way to use DRM\* protected eBooks on your eBook.

### Transfer the eBooks into Digital Editions

 - In the top left corner of Digital Editions click Library and a pop-up menu will appear.
- A file browser will appear. Select the eBook you wish to add to the Library and select Open
- The eBook will automatically be added to your Digital Editions Library

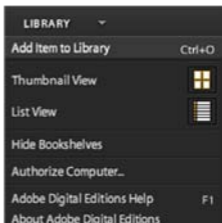


Digital Editions gives you various ways to organise and use your eBooks. Please see the Adobe website ([www.adobe.com](http://www.adobe.com)) for more information or press F1.

*\*DRM is a rights protection method used by publishing houses to protect content privacy / piracy.*

### Step 3: Transferring eBooks onto your eBook

 Once you have your eBooks imported into Digital Editions, transferring them into your eBook is a simple drag and drop process.

- Plug your USB cable into your eBook and the USB port in your PC. If the eBook is ready for transfer the eBook screen will show “**connected via USB**” and it will show up in the list of Bookshelves in Digital Editions as the **Elonex 500EB**.
- Find the eBook you want to copy.
- Drag and drop the eBook icon into your **Elonex 500EB** Bookshelf

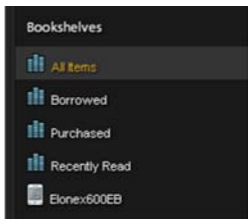

(Over the eBook icon **click** and hold your left hand mouse button and *drag* the file to over the top of the **Elonex 500EB** Bookshelf and drop it)

- The file will copy across to the eBook Reader. You can then unplug the USB cable, open the eBook and start reading.



**NOTE:** You will only be able to transfer DRM protected eBooks to a total of 6 authorised computers or eBooks.


- **NOTE:** If you transfer an eBook outside of Digital Editions it will not decrypt the DRM encoding and you will not be able to read the eBook.

# Reading Books
 
## Opening Book

- Books transferred to eBook will be listed in the Home Menu.
- The eBook supports eBooks in ePub, PDF, txt format.
- Use the <Directional> buttons to move the cursor to select book and press <OK> to open.

## Book Page Interface

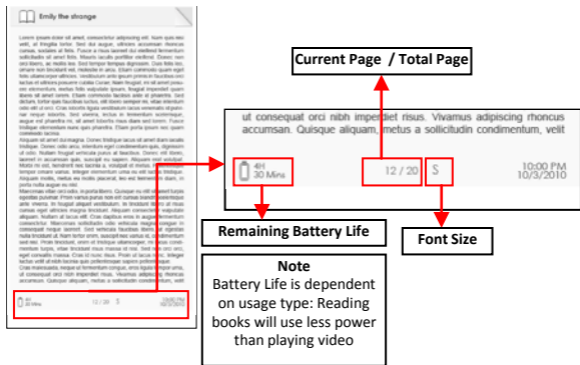

## Turning book page

- On the reading page, press <Next Page> or <Directional-Right> button to turn to the next page.
- To turn to the previous page, press <Previous Page> or <Directional-Left> button.

 
## Adjusting Font Size

- When reading, press <Zoom> button to enter the font size menu.
- There are 5 font sizes available:  
Small, Medium, Large, XLarge, XXLarge.
- Move the cursor to the desired font size then press <OK> to confirm.



## Zooming In/Out

- You will need to use zooming function to enlarge images available in the eBook (ePub & PDF file)
- From the size menu, select [Enlarge]
- The Zoom menu will appear.

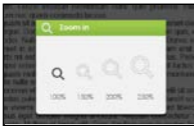

- Move the cursor to the desired zoom level and press <OK>.
- In zoom mode, use <Directional> buttons to pan across the zoomed page.
- Page turning is disabled in zoom mode.
- Press <Return> to exit zoom mode and return to original size and resume normal book reading functions.

### Using the Option Menu

When reading, press <Menu> button to enter Option Menu.

Options available:

1. Add / Delete Bookmark
2. Bookmarks
3. Go to Page
4. Music
5. Auto flip
6. Book Information
7. Rotate
8. Display Settings
9. Add to Favourite



### Adding Bookmarks

When reading, turn to the desired page that you would like to bookmark. Press <Menu> button, move the cursor to [Add Bookmark] and then <OK>.

### Deleting Bookmarks

- Turn to the bookmarked page that needs to be deleted. Press <Menu> and move the cursor to <Delete Bookmark>. Press <OK> to confirm.
- Alternatively, you can delete bookmarks from the Bookmark List.
- In the Bookmark list, press <Menu> and select [Delete] to delete selected bookmark.

### Read from Bookmarks in Home Menu

- From Home Menu, press <Menu> and select [Bookmarks] to enter Bookmark List.

Upper window displays a quick preview of the selected book.

Lower window displays the list of books with bookmarks. Press <OK> on the desired book to view the available bookmark list.



- In the Bookmark List, move the cursor to the desired bookmark, press <OK> to open.
- To delete bookmarks from the Bookmark List, press <Menu> to display [Option Menu] and select [Delete] to confirm.

### Read from Bookmarks in Current Book

- When reading, press <Menu> and select [Bookmarks] to enter into the Bookmark List.
- In the Bookmark List, move the cursor to the desired page and press <OK> to open.
- To delete a bookmark from the Bookmark List, Press <Menu> to display the Option Menu and select [Delete] to confirm.

### Go to Page

You can jump to pages using the [Go to Page] option. In the Option Menu, select [Go to Page].



In Go to Page menu, move the cursor by the <Directional-Left/Right> button. Input page number by <Directional –Up/Down> button. Move the cursor to [Apply] then <OK> to apply settings.

## Auto Flip

You can set the eBook to [Auto Flip] mode. The auto flip durations available are: 10s, 20s, 30s, 40s, 50s, 1 min.

## Book Information

You can check the information of the current book from the [Book Information] option. This will show:

Title, Author, Publisher, File Type, Date added, File size, Publisher and Expiration.

NOTE: The book information shown depends on the source of eBook that you download/purchase, some of this information may not be available.

## Rotate

[Rotate] option allows you to rotate the display orientation 90° in clockwise direction to landscape orientation.

 
- To return to original orientation, press <Menu> and press <Rotate> once again.

In landscape view, the button layout is as below:



## Reading Books

- In landscape view, the Option Menu is divided into 2 pages. To access options in the second page, move the cursor to the [More>] icon at the top right corner of the Option Menu and then enter
- To return to previous page, move the cursor to [< Back] and then press enter

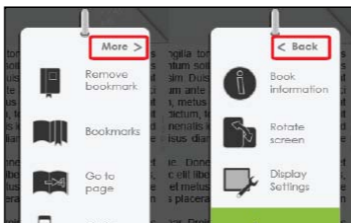

### Display Settings


- Adjusts the font colour, background colour, brightness.
- NOTE: Change of font colour and background colour are only applicable to txt and ePub documents.

### Add to Favorite

- You can add books to your Favourite List. In Option menu, move the cursor to [Add to Favourite] to add current book into Favourite List.
- To view books in your Favourite List, from Home Menu, press <Menu> button and select [Favourite].
- To remove book from Favourite:
  1. Enter Favourites List from Home menu. Move the cursor to the desired book title. Press <Menu> button and select [Delete] from the dropdown list.
  2. From reading page, press <Menu> button and select [Remove from Favourite] from the Option Menu.

### Playing background music whilst reading

- The eBook can play music when reading books or viewing photos.
- To control music playback, press <Music> button from the menu and a mini music player control bar will appear at the bottom of the page.

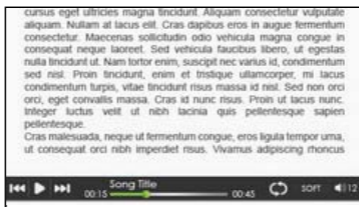

- Press the music control buttons to control music playback.
- To return to book page, press <Return> button and resume normal book reading controls.

## Playing Audio File



 



### Music Player

- From Home Menu, press <Menu> to display Option Menu.
- Move the cursor to [Music] and press <OK> to confirm.




- In the Music player, press <OK> to play/pause music
- Press <Directional Right> to play next song, press and hold to Fast Forward
- Press <Directional Left> to play previous song, Press and hold to Fast Rewind
- Press <Directional Up> to increase volume
- Press <Directional Down> to decrease volume
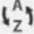
### Using Option Menu in Music Player

	Normal	EQ settings – move the cursor to [EQ Settings] , press [Left] or [Right] button to select desired EQ mode.
	Loop	Play Mode - move the cursor to [Play Mode] , press [Left] or [Right] button to select desired Play mode
	Sort by all song	To view all stored audio files
	Sort by genre	To sort audio files by genre
	Sort by album	To sort audio files by album
	Sort by artist	To sort audio files by artist

## Playing Video File

- From Home Menu, open Option menu and select  and enter into the video library.
- In video library move the cursor to your desired video file and press <OK> to start playing.
- During video playback, the button definition is as below:



 
### Options during Video Playback

During video playback, press <Menu> button to display Option Menu.

Press <Left>/<Right> button to switch between [Loop] & [Repeat]  
**Loop:** to play all video files available in the list.  
**Repeat:** repeat the current video

Press <OK> button to enter [Full Screen] or [Fit to screen Display]

Press <OK> button to return to video list.

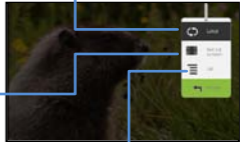

## Viewing Picture

- From Home Menu, press <Menu> to display Option Menu.
- Move the cursor to [Photo] and press <OK> to confirm.

Upper window displays a quick preview of the selected photo

Lower window displays the file list in the eBook.



- Use the <Directional> buttons to navigate through the files/folders.
- Press <OK> on the selected photo to view a full screen display.
- In full screen mode, press <Directional Left/Right> to view previous and next picture.

### Zoom In/Out Picture

- There are 3 zoom levels available. To zoom in, in full screen mode, press <Zoom> button to change different zoom level.
- To return to original size, press <Return> button and resume normal operation.

### Slideshow

- In full screen mode, press <Menu> → [Slideshow] to start.
- To stop slideshow, press <Menu> button once.
- From the drop down menu, select [Slide Time] to adjust slideshow duration.

### Thumbnail view

- In full screen mode, press <Menu> → [Thumbnail] to view pictures in thumbnail mode.
- To exit thumbnail view, press <Menu> once to return to full screen mode.

## File Explorer

- From the Home menu, press <Menu> → [Explorer]
- Press <Left> / <Right> to select Internal / SD card memory and press [OK] to enter.
- Press <Return> to exit from current directory and the cursor will move to the top for memory selection.

### Copy / Paste files

- You can copy files/folders from SD card to internal memory and vice versa.
- From the file list, move the cursor to the desired file to copy. Click <Menu> and select [Copy].
- From explorer, go to the desired directory to store the copied file. Click <Menu> and select [Paste] to start copying file into the new directory/folder.

Note: it may take a longer time to paste files/folder with big file sizes.

### Deleting Files

From explorer, move the cursor to the desired file to delete. Press [Menu] to enter display setting and select [Paste] to start.

Note: it may take a longer time to delete files/folder with big file sizes and quantities.

### Opening Settings Menu

- From Home Menu, press <Menu> to display Option Menu.
- Move the cursor to [Settings] and press <OK> to confirm.

### Time & Date

To set the clock and date.

Press <Directional Left/Right> buttons to move the cursor.

Press <Directional Up/Down> buttons to input value.

### Device Standby

- To enable / disable auto standby mode.
- To manually set the eBook to standby mode, press the <Power> button once in any menu.
- Press the <Power> button once to wake the eBook up from standby mode.

### Format Memory

To format internal memory and memory card.

NOTE: All data will be lost. Please backup your data before performing this. Elonex are not responsible for any data loss.

### About Product

Displays product information about the eBook.

### Power Management

Displays real time battery charging status of the eBook.

### Restore Factory Defaults

To restore the eBook's settings to defaults.

All settings will be restored.

### Language

To set system language of the eBook.

### User Manual

To read the digital version user guide.

## Troubleshooting

If the eBook does not function as it is expected, please try the following steps.

### **The eBook is not responding or cannot be turned on.**

- Reset the eBook by pressing and holding the power button for 6 seconds. The eBook will be forced to shutdown if it is on and you are required to restart the eBook again.
- Battery has been fully depleted. Please charge the eBook via USB or USB AC Adapter.

### **Battery Life seems short**

- The operating temperature is below 5°C. This is due to the characteristics of Lithium batteries
- The battery is not used for prolonged period. Please recharge the battery again
- The battery is not fully charged. Please charge the eBook for at least 4 hours.
- The battery needs to be replaced. Please consult Elonex authorized Service Agents for servicing.

### **It takes a long time for the display to appear**

- This is due to the characteristic of the display panel, especially in low temperature environments, and not a malfunction.

### **A Book cannot be read**

- Copyright protected books cannot be read on any device other than the ones authorised using Adobe Digital Editions.
- Check if the book has expired.
- Check if the book format is supported by the eBook.

### **The eBook cannot be operated during USB connection.**

- The eBook cannot be operated while it is connected to PC.
- Eject the eBook from computer to resume operation.
- To use the eBook while charging, click on the [Safely Remove Hardware] icon located on the left lower corner to disconnect data connection with computer. After the eBook is safely removed, computer will only charge the eBook and you can now resume normal operation.

## Precautions and Maintenance

### Battery

- Charge the battery only in temperatures from 0 to 35 degree Celsius.
- Do not charge the eBook if the battery appears damaged or is leaking.

### Operation

- Never subject the eBook to extremes of light, temperature, moisture or vibration.
- Never wrap your eBook in anything when it is being used or charged. Heat may build up in while charging or if it is used for an extended period of time.
- Do not use or store your eBook in:
  - A. Extreme high temperature, such as in a sun-heated car
  - B. Direct sunlight.
  - C. High humidity or places with corrosive substances
  - D. Sub-zero condition, especially during winter

### On Headphones

- Listening to audio at high volume for extended periods of time can cause hearing damage. To avoid damage to your hearing, keep the volume at moderate level.
- Do not use headphones while driving, cycling or operating any machinery. It can also be potentially dangerous to play at a high volume while walking, especially at pedestrian crossings.

### On SD card

- After inserting an SD card, if the eBook has no response, please take out and insert again.
- Do not remove the SD card or turn off your eBook during data writing or reading to prevent damage to data and to the eBook.
- Make sure the SD card is unlocked before writing or deleting data in the SD card.
- Backup your files and data before formatting the SD card. Please format the SD card in FAT.

## **Important Safety Instructions**

All safety and operating instructions should be read before the product is operated. Always adhere to these instructions and follow the proper working procedures for the device. Shut the eBook down properly and do not forget to save your work often. Remember to periodically back-up your data as Elonex accepts no responsibility for data loss. Failure to adhere to these Safety Instructions may invalidate your warranty.

## **Peripherals**

Take care when using peripheral devices. Always check compatibility with your device and follow the manufacturer guidelines for installation and proper use.

## **Cleaning**

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners, volatile chemicals or aerosol cleaners as these may cause damage to your eBook chassis or internal components. Use a damp cloth for cleaning.

## **Water and Moisture**

Do not use this product near water, for example near a kitchen sink etc. Any liquid entry into the internal workings of this unit may damage your eBook.

## **Heat**

The product should be situated away from heat sources such as radiators, heat stoves or other products that produce heat.

## **Power Sources**

This product should be operated only from the type of power source indicated on the marking label and only using an Elonex authorised power adapter.

## **Grounding**

This product should only be used with proper electrical grounding. Please only use power supplies supplied by Elonex otherwise this may cause damage to the electronics or injury to yourself.

## **Power Cord Protection**

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. If your power cord is damaged in any way please contact customer services.

## **Lightning**

For added protection for this product during a lightning storm or when it is left unattended and unused for long periods of time, please unplug it from the power socket. This will prevent damage to the product due to lightning and power line surges.

## **Overloading**

Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

## **Object Entry**

Never push objects of any kind into your eBook through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

## **Servicing**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## **Damage Requiring Service**

If your eBook is damaged or behaving abnormally, unplug this product from the wall outlet and refer servicing to qualified service personnel. Please refer all warranty claims to Elonex Warranty Service.

## **Replacement Parts**

Only use replacement parts specified by Elonex. Unauthorised substitutions may result in damage to your unit.

## **Avoid EM interference**

The product should be situated away from all sources of Electro Magnetic radiation, ie microwaves, amplifiers, speakers etc. These can hinder proper performance and damage your data.

## **SD card**

- After inserted an SD card, if the eBook has no response, please take out and insert again.
- Do not remove SD card or turn off eBook during data writing or reading to prevent damage to data and to the eBook.
- Make sure the SD card is unlocked before writing or deleting data in the SD card.
- Backup your files and data before formatting the SD card. Please format the SD card in FAT.

### Notice

Elonex reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©2010 Elonex International

**Trademarks:**

All trade names and trademarks are the properties of their respective companies.

Copyright © 2010 Elonex International, All Rights Reserved.

This product contains Adobe® eBook® Mobile software under license from Adobe Systems Incorporated, Copyright© 1995-2010 Adobe Systems Incorporated. All rights reserved. Adobe and eBook are trademarks of Adobe System Incorporated.

## End of Life Disposal

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment. **WARNING!** This product contains batteries and electronics that may be harmful to the environment; they should not be discarded with normal household waste but taken to your local collection centre for recycling.



Elonex follows a principle of constant improvement and is not held responsible for any changes that are made to the unit, firmware nor accepts any liabilities for these changes.