imagine if books

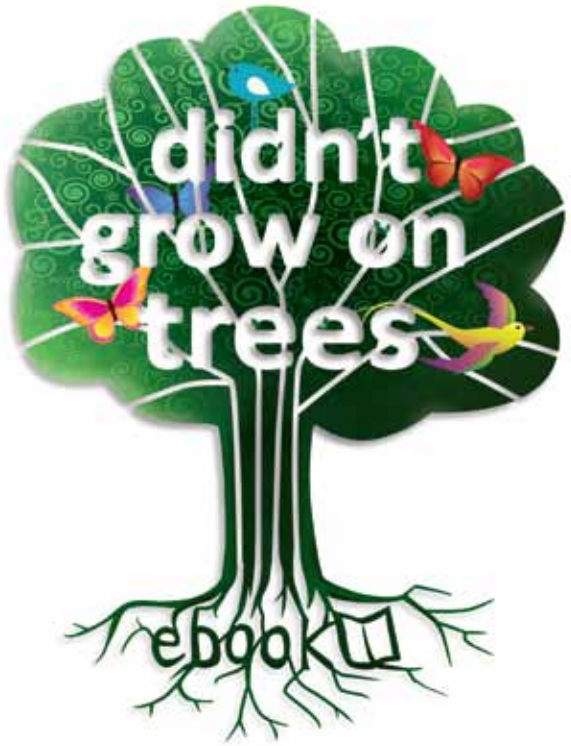

The Elonex eBook carries the Green Tick Certification. The use of eBooks is low impact because unlike printed books, almost no natural resources are used in their production.

The eBook is also RoHS certified to show that absolutely no hazardous materials are used in its manufacture. By reading eBooks you are helping to reduce the strain on the world's rainforests.

eBook Minimum System Requirements (PC)

:: Windows XP, Vista, 7 :: USB Port :: Internet Connectivity :: 50Mb Free HDD space

Note: Some complex DOC, PDF & HTML files may not be decoded by the eBook.

www.elonex.com | 0871 222 3456

© 2009 copyright Elonex International. Elonex and the ebook logo are trademarks of Elonex International. All Rights Reserved.
All specs are correct at time of press however are subject to change without notice. Digital Editions is a trademark of Adobe Systems Incorporated.

ebook

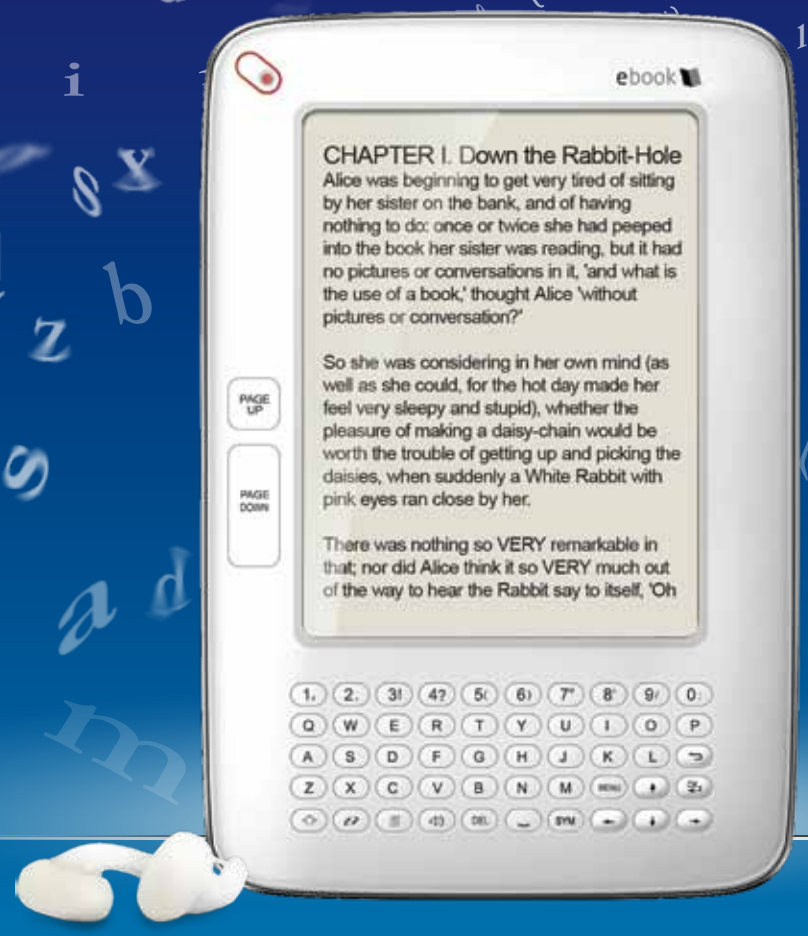

quick start guide

The Next Chapter in the Story of Reading

The Elonex eBook turns the next page in the history of reading. eBooks are a revolution in the written word and mark the next step in written communication since prehistoric Cave Paintings, the Quill and the Printing Press. The eBook is also incredibly environmentally because each new eBook you read doesnt involve any trees being cut down.

A Revolution in Reading

The Elonex eBook is a great new way for you to enjoy reading your favourite books. The pocketsize eBook lets you carry around thousands of eBooks, AudioBooks & images with you, wherever you're going. You can also listen to music from the built in speakers or headphones, and record memos using the integrated microphone.

Congratulations on your new purchase and please read this quick start guide thoroughly to get the most enjoyment from your eBook.

Technical Support

This quick start guide is included to help you get set up and reading in no time. As part of Elonex's continued effort to support the environment a paper manual has not been printed. For Technical Support queries and advice please visit www.elonex.com/support

To help you get the most out of your eBook you get a 12 month return to base warranty and access to helpful advice from the technical support helpdesk on

www.elonex.com/support

0871 222 3456 (national rate)

support@elonex.com

Getting Started

Unpack your box and remove all the packaging. We recommend that you retain the product packaging in case of any warranty issues.

Connect the USB cable to your PC. The battery comes with minimal charge so Elonex recommends that the first time you use the eBook you should charge it for a minimum of 8 hours to get the best battery life.

Turn it on by pressing the Power Button on the top left corner. The eBook will then load and you can start reading your 100 free eBooks. For information on how to download and use eBooks please read on.

ebook

lose yourself in a good eBook

eBook I the next chapter in the story of reading

Getting to know your eBook

The diagrams below explain the eBook's buttons and inputs/outputs

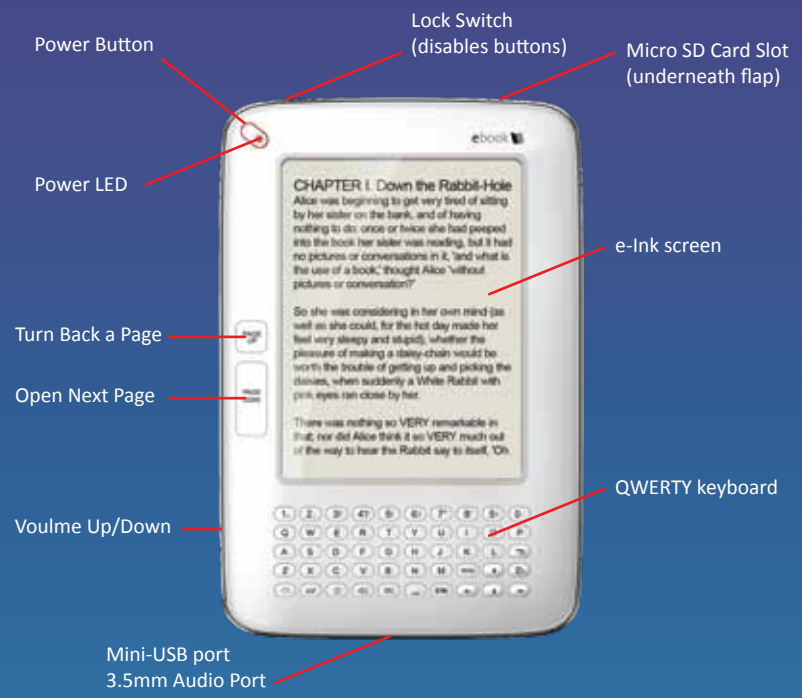

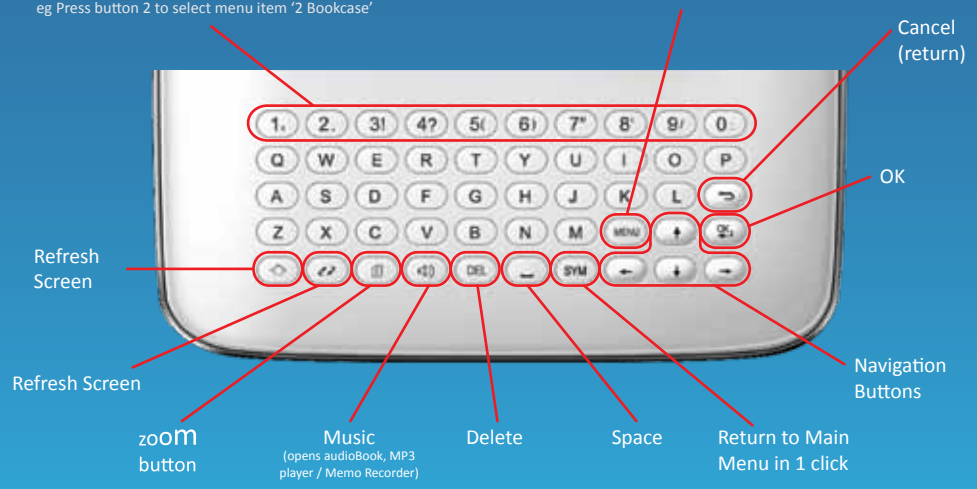

eBook Main Menu

The images below show the main menu of your eBook (depending on which model you purchased). When you turn on your eBook, by pressing the Power button on the left hand side ,you wll be presented with these options.

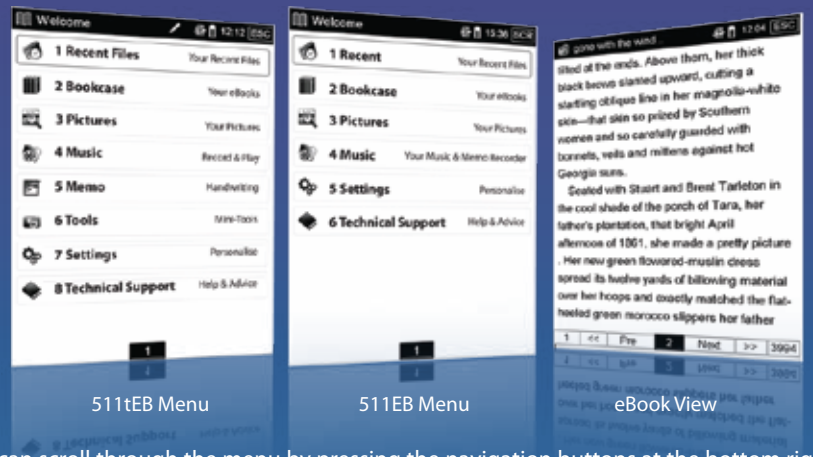

511tEB Menu 511EB Menu eBook View

You can scroll through the menu by pressing the navigation buttons at the bottom right of the keyboard. Press 'OK' to select your choice. You can alternatively press the number on the keyboard that is associated with your choice - ie press the number '2' key to open '2 Bookcase'. This number system applies for all the menus in the eBook.

If you have the 511tEB touchscreen version you can use your stylus to touch the option you want.

Using the TouchScreen (511tEB only)

The eBook 511tEB has a touch sensitive screen which lets you control all aspects of the eBook's menu system. It also lets you annotate eBooks and also make notes in the memopad. The TouchScreen is very durable but also very sensitive. You should only use the stylus supplied (pull it out from the bottom right corner of the eBook) and not any other pointed implements.The eBook will not respond to your fingertips, only the stylus.

Making Memos

From the main menu select option 5 and enter Memo. Here you can make notes that are handwritten (notes) or text. When the Memopad is open choose 'Note' or 'Text' at the top left of the screen. The text can be inputted either using the QWERTY keyboard or using the character reader.

The character reader works when you handwrite a complete word in the large box at the bottom of the screen. The eBook will then read this and convert it to text in the memopad. You should write one word at a time and if the word is incorrect the eBook will offer your varous other suggestions in the box in the center of the screen. Just tap on the correct word and it will be added to your memo.

Reading eBooks

Your eBook comes with 100 free eBooks in your Bookcase to get you started. You can easily buy more eBooks to add to your collection. For details on how to transfer these please read the section below "Transferring eBooks with DRM protection".

To start reading an eBook In the main menu scroll to '2 Bookcase' and press OK (or press 2 on the keyboard) to open your collection of eBooks. Once you have selected the eBook you want to read and press OK to open it.

To turn the page You can either use the 'NEXT PAGE' or PREV PAGE' buttons on the left side of the screen or alternatively the arrow buttons at the bottom right of the keyboard.

Returning to an eBook When you 'pick up' an eBook you've already started reading the eBook will remember which page you're on and will automatically open at the last page you were reading. You can also view the most recent books you've read if you select '1 Recent Files' from the main menu.

Jumping to a page When you have an eBook open, use the keyboard to type the page number you want to go to and press OK to 'jump' straight to that page.

Enlarging Font Size (Zoom) Press the Zoom button on the keyboard to enlarge the font size displayed on screen. Keep pressing Zoom to cycle through from small to medium to large and back to small depending on your preference.
(You can also press 'Menu' and '9 Leading Setting' to change the line spacing to fit more or less text on the screen).

Adding a Bookmark A bookmark is the digital equivalent of a bookmark, train ticket or receipt that you might use to mark the page you're reading or a special place in the book. To add a Bookmark on the page you're reading, press the 'MENU' button and press '3 Bookmark'. Then press the 0 number key, to add the bookmark and reference it with a small quotation. To open the eBook at a bookmark you've already made, scroll to the relevant bookmark and press 'OK'.

Transfering eBooks with DRM protection

Any additional eBooks you buy will generally come with Digital Rights Management (DRM) which gives you and the eBook's author copyright protection. The Elonex eBook works with Adobe Digital Editions™ which is the best way for you to download and manage DRM protected eBooks. The best bit about it is that its free to download and easy to use.

Transfering eBooks onto your eBook reader using Digital Editions™ is a simple 3 step process and you can find full details and a tutorial at www.elonex.com/support

Viewing Pictures

The eBook lets you view pictures or photos. These are displayed in grayscale using 8 different shades. Press 'Menu' to choose to view pictures so they fit inside the screen, they are sized to the width of the screen, the height of the screen or are the actual size or the raw picture. To scroll through your pictures press 'Next Page' or use the navigation buttons at the bottom right of the keyboard.
NOTE: The eBook can view images up to a maximum resolution of 3 MegaPixels.

Playing Music

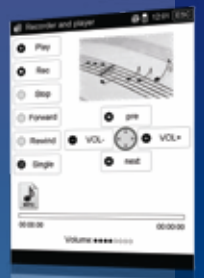

The eBook lets you play music through its integrated speakers or out via the earphones included in the package. When you connect the earphones, the speakers will automatically mute and the music will start playing through the earphones.

To adjust the volume you can use the Volume Up (+) or Volume Down (-) buttons on the left hand side of the ebook. You can also use the left and right arrow keys at the bottom right of the keyboard.
To skip between songs press the up and down arrow keys.

Recording Memos

You can record a memo / voice message using the eBook's integrated microphone. From the main menu select the 'Music' option. To start recording press '3 Rec'. This will start recording immediately and save the file as a .wav file. The file will be saved in the e_audio in the Music folder. Press '1 Play' to playback your memo.

Transferring Content to your eBook

For content which is not DRM (Digital Rights Managed) content you can simply treat your eBook like a USB device and 'drag and drop' content from your computer. When you first plug your eBook into your computer Windows will automatically detect and install the eBook which will show up as a removeable drive in My Computer as 'LNX eBook'.

To transfer a file find it in My Documents and copy it by right clicking your mouse and pressing copy. Then open the LNX eBook folder from My Computer and paste the file into the corresponding folder on th eBook;

Folder	File Types
e_audio	Audio (Music)
e_book	eBooks
e_image	Pictures / Photos
e_listen	Audio (AudioBooks)
e_note	Note Files
Digital Editions	This is where DRM protected content you buy is stored.